

Snow guards

Snow guards are used to prevent dangerous situations that may be caused by snow and ice falling from the roof. The snow guards can also protect structures installed on the roof. The snow stoppers must be used when the roof pitch is 1:8 or more. The snow guards must be positioned as close to the eaves as possible so that the load of the snow is directed towards the load-bearing structures.



Fastener
520



Fastener
654



Model 502



Fastener
520



Fastener
654



Model 503

Colour Choices

Galvanized, Black, Charcoal
Dark Brown

Lengths

7ft lengths includes 3 fasteners
Additional fasteners sold separately

Steel Tile Co. is not responsible for falling snow and or ice damage. Snow guards help prevent snow and ice from sliding. Regional snowload conditions vary from location to location. We recommend you consult your distributor or installer before applying. The number of Snow guards required will vary depending on your roof size and local snow conditions.